



## Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold the CLOCK button (2) for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.

3. Push the CLOCK button until the desired time is displayed.

- The time is advanced by one minute, each time the button is pushed.
- The time is advanced by ten minutes, when the button is pushed and held.

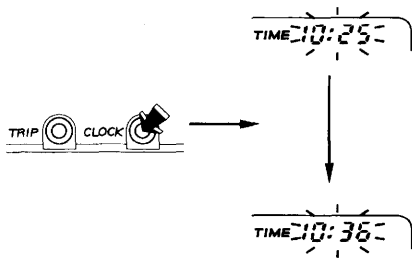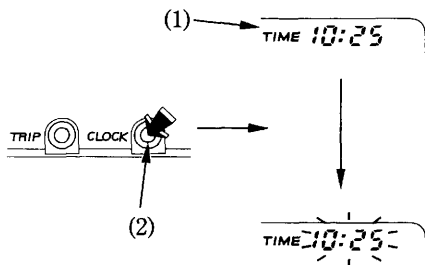

- (1) Digital clock  
(2) CLOCK button