


## Inspection

The reserve tank is behind the left lower cowl.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (3), remove the left lower cowl (page 56) and the reserve tank cap (4).

Add coolant mixture until it reaches the UPPER level mark (2). Always add coolant to the reserve tank.

Do not attempt to add coolant by removing the radiator cap.

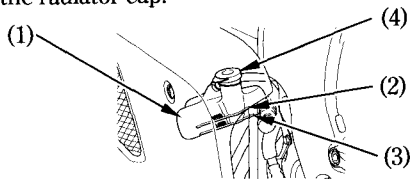

- |                      |                      |
|----------------------|----------------------|
| (1) Reserve tank     | (3) LOWER level mark |
| (2) UPPER level mark | (4) Reserve tank cap |

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.