




Seat Removal

Refer to *Safety Precautions* on page 62 .

Seat Cowl Panel

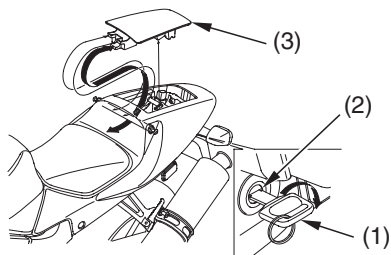

(1) ignition key
(3) seat cowl panel

(2) seat lock

Removal

1. Insert the ignition key (1) into the seat lock (2).
2. Turn it clockwise and pull up rear of the seat cowl panel (3).
3. Pull the seat cowl panel (3) back and up.

Installation

1. Push forward and then down on the rear of the seat cowl panel.
- Be sure to securely lock the seat cowl panel after reinstalling it.

