




Lower Fairing Removal

Refer to *Safety Precautions* on page 62 .

The lower fairing must be removed to service the coolant reserve tank, engine oil, fuses, or to remove the inner fairing.

RIGHT SIDE

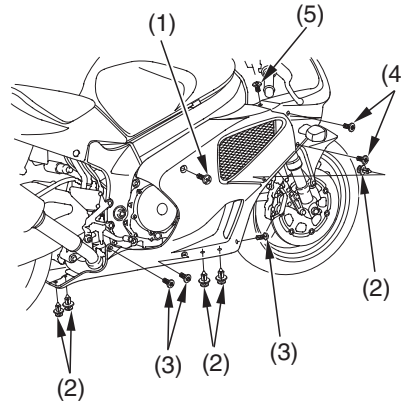

(1) bolt A
(2) clips
(3) bolts B

(4) bolts C
(5) bolts D

