



## Coolant

---

1. With the engine at normal operating temperature, check the coolant level in the reserve tank. It should be between the UPPER ( 1 ) and LOWER ( 2 ) level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

2. Remove the lower fairing (page 82 ).
3. Remove the reserve tank cap ( 3 ).  
Always add coolant to the reserve tank.  
Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
5. Install the reserve tank cap.
6. Install the lower fairing.

### Coolant Replacement

Refer to *Safety Precautions* on page 62 .

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 216).

## 102 Servicing Your Honda

