

### Main Fuse A:

The main fuse A (1) is located behind the left side cover.

The specified fuse is:

**30 A**

1. Remove the left side cover (page 39 ).
2. Open the main fuse A cover (2).
3. Pull out the old fuse and install a new fuse.  
The spare main fuse (3) is located near the starter magnetic switch.
4. Close the main fuse A cover and install the left side cover.


### Main Fuse B:

The main fuse B (4) is located behind the left side cover.

The specified fuse is:

**30 A**

1. Remove the left side cover (page 39 ).
2. Open the main fuse B cover (5).
3. Pull out the old fuse and install a new fuse.  
The spare main fuse (3) is located near the starter magnetic switch.
4. Close the main fuse B cover and install the left side cover.

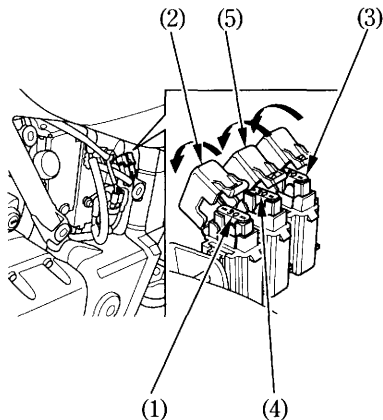

- |                       |                       |
|-----------------------|-----------------------|
| (1) Main fuse A       | (4) Main fuse B       |
| (2) Main fuse A cover | (5) Main fuse B cover |
| (3) Spare main fuse   |                       |