

Periodic Maintenance

Tires & Wheels	<p>Check the air pressure with a gauge and add air if needed (page 122). Examine the tread for wear (page 124). Look closely for nails, embedded objects, cuts, and other types of damage (page 124). Roll your motorcycle so you can inspect the entire surface. Check the condition of the wheels.</p>
Fluids	<p>Check the levels of the engine oil (page 91), coolant (page 98), brake fluid (page 119), clutch fluid (page 108), and final drive oil (page 103). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brakelight, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the throttle grip (page 106).</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>