

# Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)						Refer to page	
				× 1,000 mi	4	8	12	16	20		24
				× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSION RELATED ITEMS	*	FUEL LINE				I		I		I	—
	*	THROTTLE OPERATION				I		I		I	—
		AIR CLEANER	2				R			R	100
		CRANKCASE BREATHER	3			C	C	C	C	C	102
		SPARK PLUGS					R		R		112
	*	VALVE CLEARANCE					I		I		—
		ENGINE OIL	6			R		R		R	87
		ENGINE OIL FILTER				R		R		R	92
	*	ENGINE IDLE SPEED				I	I	I	I	I	110
		RADIATOR COOLANT	4				I		I		R 96
	*	COOLING SYSTEM					I		I		—
	*	SECONDARY AIR SUPPLY SYSTEM					I		I		—
*	EVAPORATIVE EMISSION CONTROL SYSTEM	5					I			I	—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202 ).