


Seat Removal

Refer to *Safety Precautions* on page 64 .

The seat must be removed for battery maintenance.

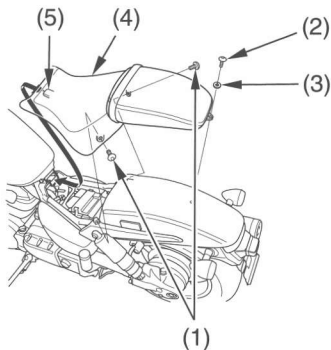

- | | |
|---------------------------|----------|
| (1) seat mounting bolts A | (4) seat |
| (2) seat mounting bolt B | (5) tab |
| (3) washer | |

Removal

1. Remove the seat mounting bolts A (1), bolt B (2) and washer (3).
2. Pull the seat (4) back and up.

Installation

1. Insert the tab (5) into the recess under the frame.
 2. Install the seat mounting bolts A, B and washer.
 3. Tighten the seat mounting bolts securely.
- Be careful not to scratch the rear fender during seat installation or removal.