

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


## Fuel Capacity

Fuel tank capacity, including reserve:  
4.76 US gal (18.0 ℓ)

The tank should be refilled as soon as possible when the fuel reserve indicator comes on.

## Refueling Procedure

Refer to *Safety Precautions* on page 64 .

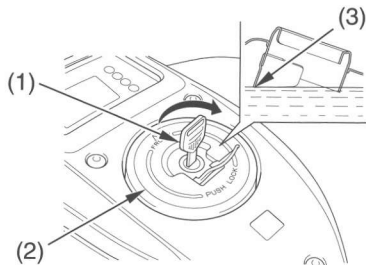

- (1) ignition key                      (3) filler neck  
(2) fuel fill cap

1. Insert the ignition key ( 1 ) in the fuel fill cap ( 2 ) and turn it clockwise.

(cont'd)