


Engine Oil & Filter

Install a New Oil Filter:

5. Remove the oil filter (4) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 148).

RIGHT REAR, UNDER ENGINE

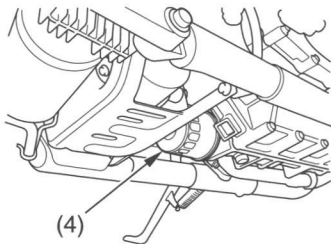


(4) oil filter

6. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 148).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

7. Apply a thin coat of engine oil to the rubber seal (5) of a new oil filter.

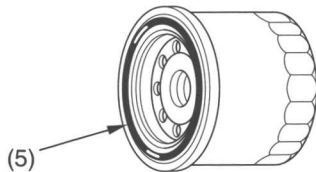

(5) rubber seal