

If You Have a Flat Tire

Emergency Rear Wheel Removal/Installation


Refer to *Safety Precautions* on page 64 .

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Removal

1. Park your motorcycle on a firm, level surface.
2. Carefully raise the center of the motorcycle with a chain hoist.
3. If applicable to your model, remove the rear axle shaft cap (1).

LEFT REAR

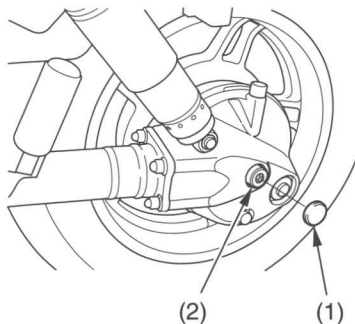

- (1) rear axle shaft cap
(2) rear axle shaft