



(Ref.No.) Description	Function
(8) High beam indicator (blue)	Lights when the headlight is on high beam.
(9) STAND BY indicator (amber)	Flashes when the Idling Stop system is activated (page 52). If you get off the scooter (without sitting) while the engine is stopping by the Idling Stop system, the STAND BY indicator will go out, and for about 3 minutes later, the Idling Stop system will be cancelled.

