




This scooter has a fuel-injected engine with an automatic choke. Follow the procedure indicated below.

1. Place the scooter on its center stand.
2. Lock the rear wheel by squeezing the rear brake lever (1).

The electric starter will only work when the rear brake lever is squeezed and the side stand is up.

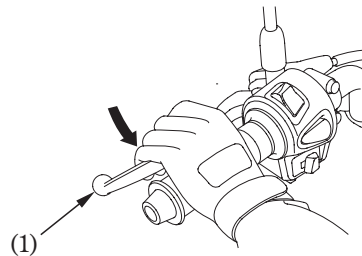

(1) Rear brake lever

