




### Headlight Bulb

1. Pull back the rubber dust cover (1).
2. Turn the bulb (2) counterclockwise, and remove it.
3. Remove the bulb from the connector (3).
4. Install a new bulb in the reverse order of removal.
  - Install the rubber dust cover with its "TOP" mark (4) facing up.

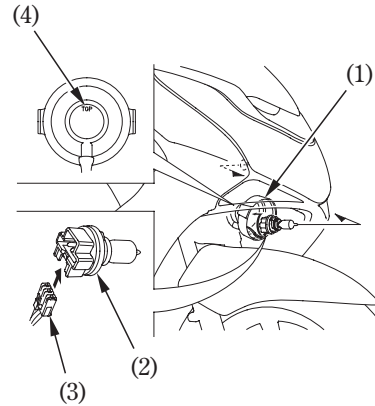

(1) Rubber dust cover  
(2) Bulb

(3) Connector  
(4) "TOP" mark

