



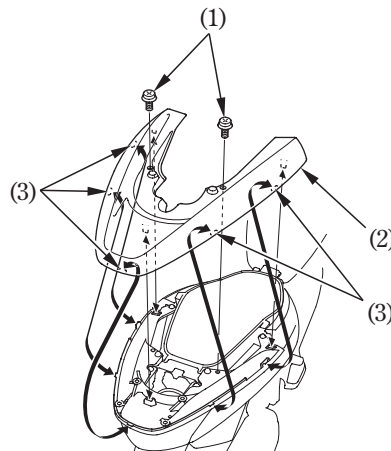

Brake/Tail Light Bulb

1. Remove the screws (1).
2. While the rear cover (2) pressing as illustration, unhook the prongs (3), from the front side of the rear cover.
3. Remove the rear cover.

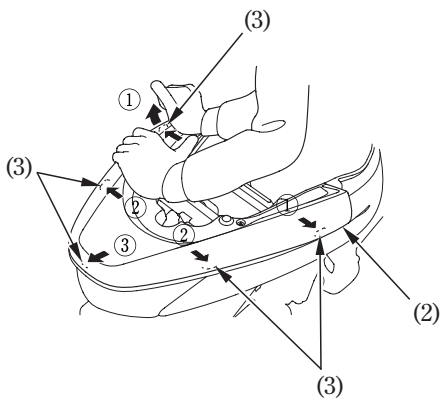

- (1) Screws
- (2) Rear cover
- (3) Prongs

