




Front Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

1. Turn the socket (1) counterclockwise, and remove it.
2. Slightly press the bulb (2) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.

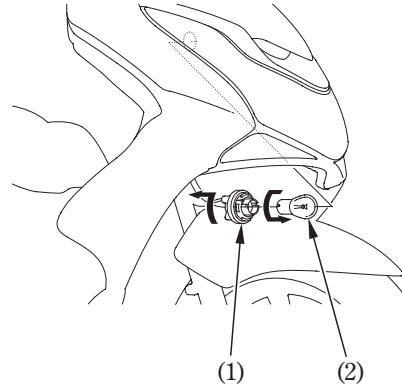

- (1) Socket
(2) Bulb

