


Clip B


The clip B must be removed to service the coolant reserve tank.

Removal

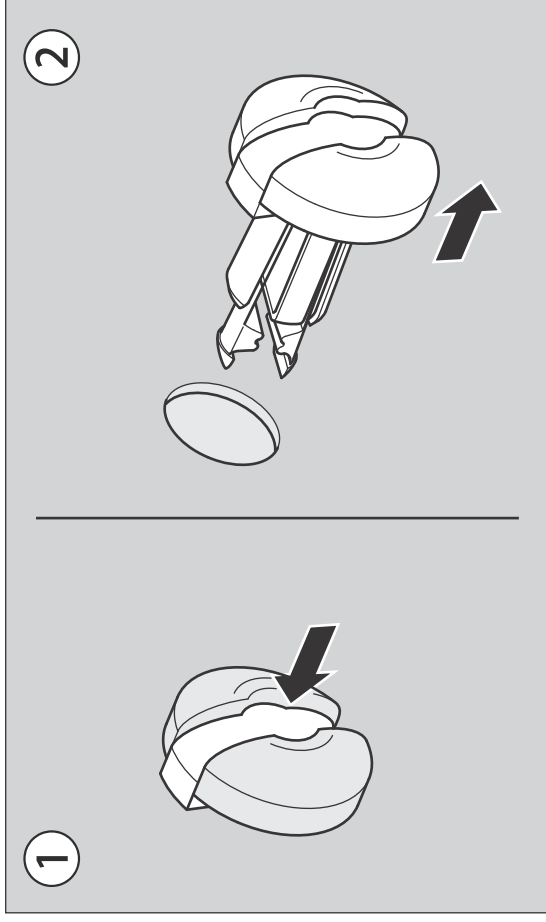

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.

Installation

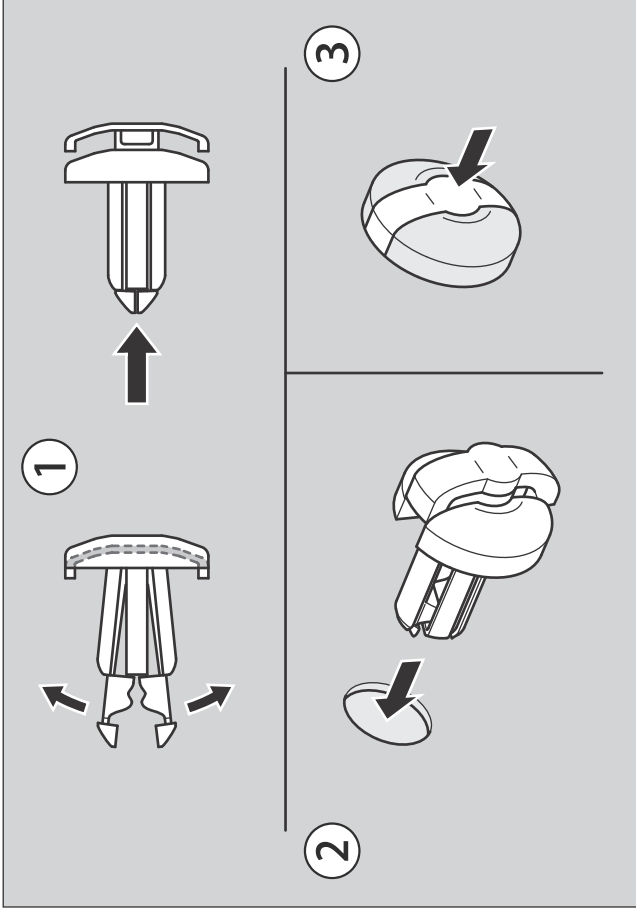

1. Slightly open the retaining pawls and then push them out.
2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.