

Changing Spark Plug

For the recommended spark plug, see "Specifications." ➤ P. 107

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.

1. Place your scooter on the side stand on a level surface.
2. Pull the floor mat off.
3. Remove the screw.
4. Remove the plug maintenance lid by inserting a flat head screwdriver covered with a protective cloth into the slit on the floor.

