

3. Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap/dipstick, drain bolt and sealing washer to drain the oil.
6. Remove the oil strainer screen cap, O-ring, spring and oil strainer screen and let the remaining oil drain out.
 - Discard the oil at an approved recycling centre.

7. Clean the oil strainer screen.
8. Check that the oil strainer screen and sealing rubber are in good condition.
9. Replace the O-ring and apply a thin coat of engine oil to the new O-ring before installing it.
10. Install the oil strainer screen, spring, O-ring and oil strainer screen cap and tighten.

Torque: 20 N·m (2.0 kgf·m, 15 lbf·ft)

