

11. Install a new sealing washer onto the drain bolt.
12. Install the drain bolt and tighten.

Torque: 24 N·m (2.4 kgf·m, 18 lbf·ft)

13. Fill the crankcase with the recommended oil (► P. 51) and install the oil fill cap/dipstick.

Required oil

When changing oil &

cleaning the strainer screen:

0.9 litres (1.0 US qt, 0.8 Imp qt)

When changing oil only:

0.8 litres (0.8 US qt, 0.7 Imp qt)

14. Check the oil level. ► P. 66
15. Check that there are no oil leaks.