


## Inspecting the Rear Brake Lever Freeplay


1. Place the scooter on its centre stand.
2. Measure the distance of the rear brake lever before the starts to take hold.

**Freeplay at the tip of the brake lever:** 10 to 20 mm (0.4 to 0.8 in)

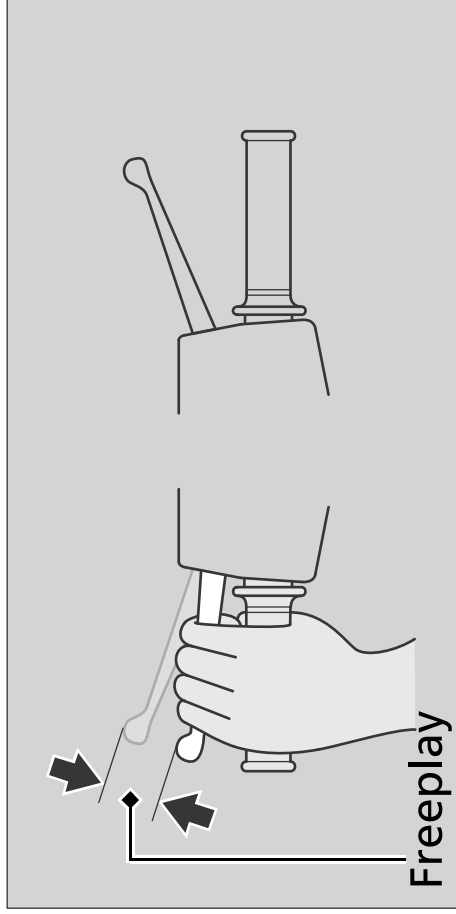

## Adjusting the Rear Brake Lever Freeplay

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead. Make sure the cut-out on the adjusting nut is seated on the brake arm pin when adjusting the freeplay.

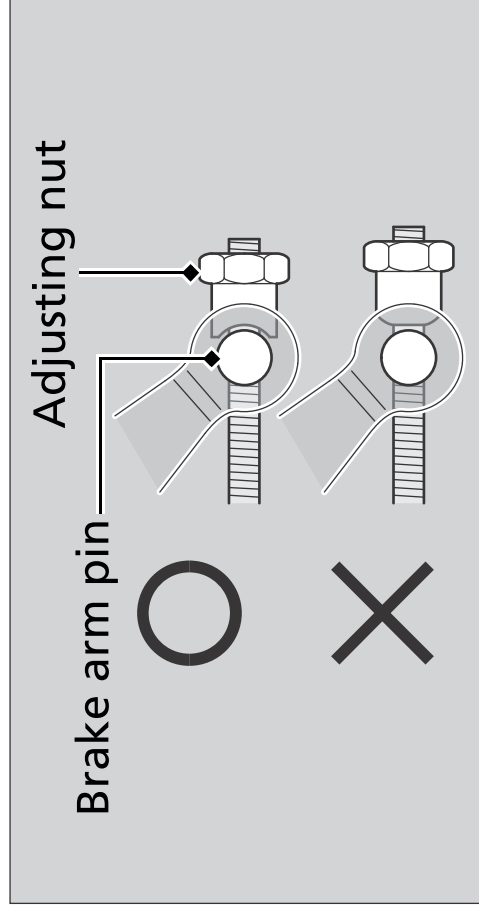

If proper adjustment cannot be obtained by this method, see your dealer.