

When the Idling Stop System Does Not Operate Properly ► Engine Does Not Start Even If the Throttle is Opened

Engine Does Not Start Even If the Throttle is Opened

Engine does not start even if the throttle is opened, perform the followings.

If the side stand is down:

When you put down the side stand, Idling Stop system will be cancelled. At the same time, the flashing Idling Stop indicator changes to stay on. See starting procedure (➡ P. 31) for standard engine starting.

If the Idling Stop switch is at IDLING:

While the engine is stopping by the Idling Stop system, if you push the Idling Stop switch to IDLING, the Idling Stop system will be cancelled. See starting procedure (➡ P. 31) for standard engine starting.

Low (or dead) battery or battery lead is loose:

Check the battery and battery terminals. If the battery is weak, charge the battery.