



Brake/Tail Light Bulb

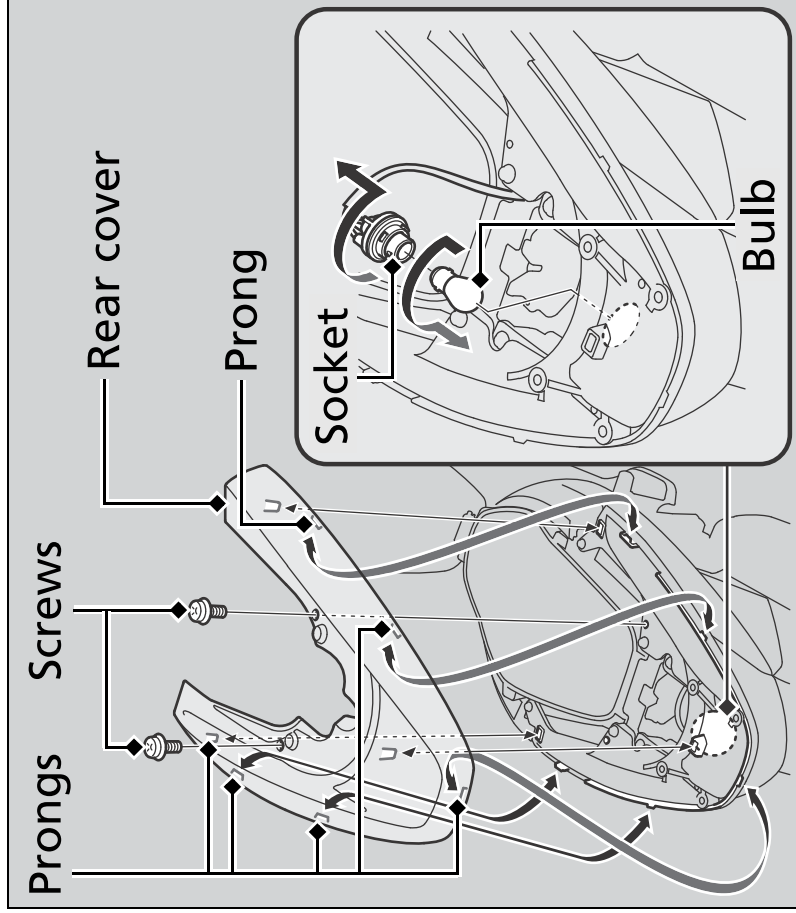

1. Remove the screws.

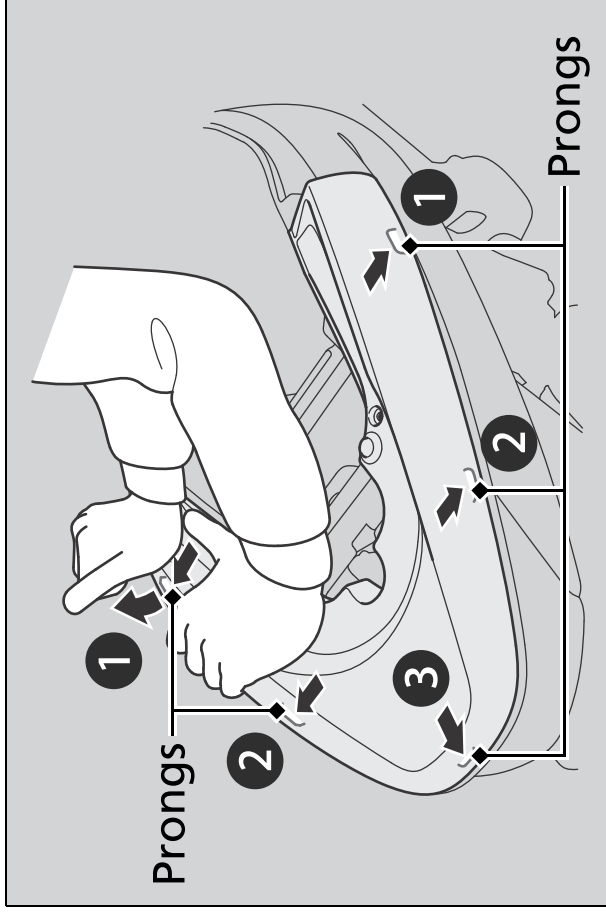

2. While the rear cover pressing as illustration, unhook the prongs, from the front side of the rear cover.
3. Remove the rear cover.
4. Turn the socket counterclockwise and pull it out.
5. Slightly press the bulb in and turn it counterclockwise.
6. Install a new bulb and parts in the reverse order of removal.