

## **REMOVAL FROM STORAGE**

1. Uncover and clean the motorcycle.

Change the engine oil if more than 4 months have passed since the start of storage.

2. Charge the battery as required. Install the battery.

3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.

4. Perform all Pre-ride Inspection checks (page 48 ).

Test ride the motorcycle at low speeds in a safe riding area away from traffic.