

Fuel Tank

The fuel tank capacity, including reserve, is:

7.0 l (1.8 US gal, 1.5 Imp gal)

To open the fuel cap (1), pull out the breather tube (2) from the steering stem nut (3). Then turn the tank cap counterclockwise.

After refueling, insert the breather tube into the steering stem nut.


Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

FOR AUSTRALIA ONLY:

Use unleaded petrol with a research octane number of 91 or higher.

CAUTION:

* If “spark knock” or “pinging” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinging persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

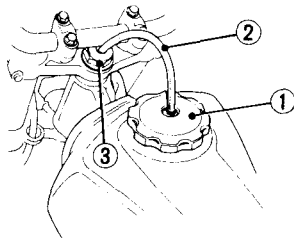

(1) Fuel cap
(2) Breather tube

(3) Steering stem nut