

## FEATURES

(Not required for operation)

### STEERING LOCK

The steering lock (1) is on the steering column under the headlight case. Turn the handlebar all the way to the right, insert the steering key in the lock, turn the key 60° to the left, and press the lock all the way in. Turn the key back to the original position and remove. To unlock the steering, perform the locking sequence in the reverse order.

