

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (1)]				REFER TO PAGE	
			x 1000km	1	4	8		12
			x 1000mi	0.6	2.5	5		7.5
			NOTE MONTHS		6	12		18
DRIVE CHAIN		NOTE (4)	EVERY 1000km (600mi)	I, L		60-65		
DRIVE CHAIN SLIDER				I	I	I	60	
BATTERY				I	I	I	72-73	
BRAKE SHOE WEAR				I	I	I	71	
BRAKE SYSTEM				I	I	I	14-17	
* BRAKE LIGHT SWITCH				I	I	I	76	
* HEADLIGHT AIM				I	I	I	—	
CLUTCH SYSTEM				I	I	I	18-19	
SIDE STAND					I	I	67	
* SUSPENSION					I	I	66	
* NUTS, BOLTS, FASTNERS		NOTE(4)		I		I	—	
** WHEELS/TIRES		NOTE(4)		I	I	I	—	
** STEERING HEAD BEARINGS				I		I	—	

\* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA service manual.

\*\* In the interest of safety, we recommend these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. At higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding unusually wet or dusty areas.
3. Service more frequently when riding in rain or at full throttle.
4. Service more frequently when riding OFF-ROAD.