


## CAM CHAIN ADJUSTMENT

(Refer to the maintenance precautions on page 47).

When the cam chain is noisy, adjust the tension in the following manner:

1. Start the engine and set the idle speed.
2. Remove the rubber cap and loosen the cam chain adjuster (1) [not the 6 mm sealing bolt (2)]. This will automatically apply the proper tension to the cam chain.
3. After completing the adjustment, tighten the adjuster securely.

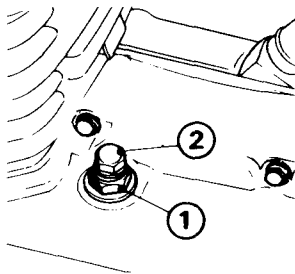

- (1) Cam chain adjuster  
(2) 6 mm sealing bolt