

STORAGE GUIDE

STORAGE

Extended storage, such as for winter, requires that you take certain steps to reduce the effects of deterioration from non-use of the motorcycle. In addition, necessary repairs should be made **BEFORE** storing the motorcycle; otherwise, these repairs may be forgotten by the time the motorcycle is removed from storage.

1. Change the engine oil.
2. Lubricate the drive chain.
3. Drain the fuel tank and carburetor into an approved gasoline container.
Spray the inside of the fuel tank with an aerosol rust-inhibiting oil.
Reinstall the fuel cap on the tank.

NOTE:

- * If storage will last more than one month, carburetor draining is very important, to assure proper performance after storage.

▲ WARNING

- * **Petrol is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is drained or stored and where the fuel tank is refueled.**
- 4. Remove the spark plug and pour a tablespoon (15–20 cm³) of clean engine oil into the cylinder. Operate the kickstarter several times to distribute the oil, then reinstall the spark plug.

NOTE:

- * When turning the engine over, the Engine Stop Switch should be **OFF** and the spark plug placed in its cable cap and grounded to prevent damage to the ignition system.