

Emergency Switch


The three position emergency switch ① is located on top of the right handle grip switch housing. In the “ON” position (center) the ignition circuit is complete and the engine operates. In the “OFF” position (either side of center) the ignition circuit is open and the engine will not operate.

This switch is intended primarily as a safety or emergency switch and normally remains in the “ON” position. The ignition will not operate unless the main switch is also in the “ON” position.

Headlight Control Switch

The headlight control switch ② is located on the right handle grip switch housing. It can be operated without taking the hand off the handle grip. The red dot is the “OFF” position (headlight and taillight off). “L” is the low beam position

(low beam light and taillight on). “H” is the high beam position (high beam light and taillight on). The headlight will only operate when the main switch is in the “ON” position.

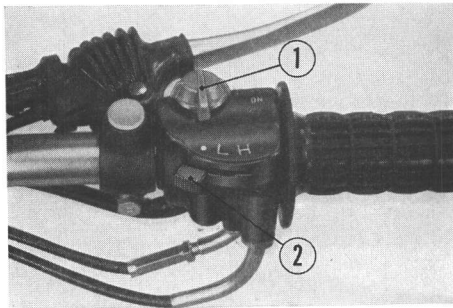

- ① Emergency switch
- ② Headlight control switch