

Service Required	Months or Miles, whichever occurs first					Page Reference	
	Month	First	Sec- ond	Third	Thereafter Repeat Every		
		—	6	12	6		12
		Mile	200	3,000	6,000		3,000
Km	300	5,000	10,000	5,000	10,000		
Engine Oil—change	○	Every 1,000 Miles (1,600 Km)				34	
Oil Filter—clean	○		○		○	36	
Spark Plugs—clean and adjust or replace		○	○	○		37	
*Contact Breaker Points—check or service		○	○	○		38	
*Ignition Timing—check or adjust	○	○	○	○		39	
*Valve Tappet Clearance—check or adjust	○	○	○	○		40	
*Cam Chain—adjust	○	○	○	○		42	
Air Cleaner—clean and		○		○		43	
replace			○		○	43	
Throttle Operation—check		○	○	○		44	
*Carburetor—check or adjust		○	○	○		45	
Fuel Valve Strainer—clean		○	○	○		46	
Fuel Tank and Fuel Lines—check		○	○	○		—	
Clutch—check or adjust	○	○	○	○		47	

Items marked \* should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. All other maintenance items are simple to perform and may be serviced by any owner.