


## Cam Chain Adjustment


When cam chain is noisy, adjust its tension in the following manner:

1. Stop the engine.
2. Remove the generator cover.
3. Align the "T" mark ① with the index mark ② when the piston is at top dead center on the compression stroke. See valve tappet adjustment (page 40~41).

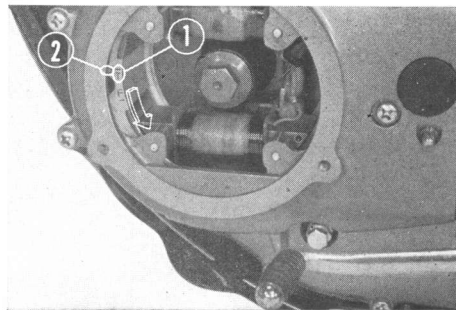

① "T" mark      ② Index mark

4. Loosen the cam chain adjuster lock nut ③.
5. Hold the generator rotor and loosen the cam chain adjuster ④. Tension is automatically applied to the cam chain.
6. Tighten the cam chain adjuster and the lock nut.

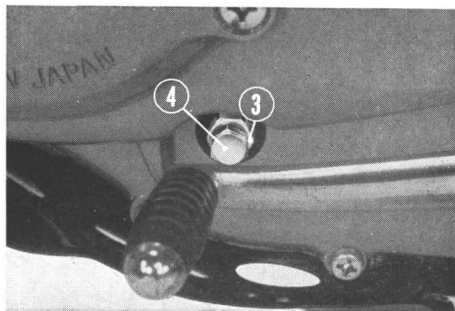

③ Cam chain adjuster lock nut  
④ Cam chain adjuster