


Rear Suspension Lubrication

There are grease fittings at each end of the rear fork pivot. The rear fork pivot should be lubricated every 3000 miles (5000 km) with multipurpose grease, type NLGI No. 2.

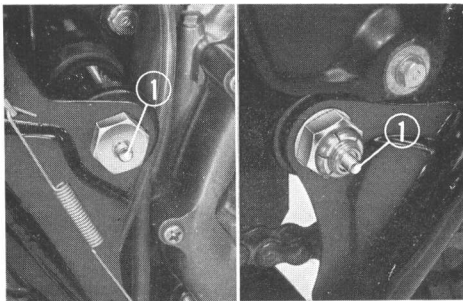


① Grease nipples

Front Wheel Removal

To remove the front wheel, proceed as follows:

1. Place a wood block under the engine and raise the front wheel off the ground.

2. Remove the cotter pin ① and disconnected the front brake cable ② from the brake arm.
3. Remove the speedometer cable set screw ⑥ and disconnect the speedometer cable ③ (page 60).
4. Remove the front axle holder nuts ④ (four on each side), and remove the front axle holders (one on each side),

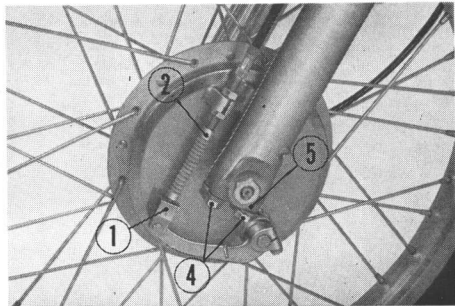

① Cotter pin ② Front brake cable
④ Front axle holder nuts
⑤ Front axle holder