


Headlight Replacement

Replace the sealed beam unit as follows :


1. Remove the two headlight attaching screws and remove the headlight from the headlight case.
2. Remove the two retaining lock pins ② and lock screws ③ from the headlight rim.
3. Remove the beam adjusting screw ④.
4. Remove the sealed beam unit.
5. Install new sealed beam unit in the reverse order of removal.

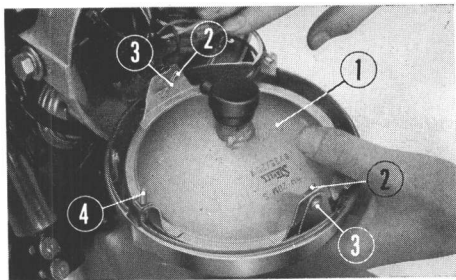

- ① Headlight ② Lock pins
③ Lock screws ④ Beam adjusting screw

Tail/stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward and twist to the left and the bulb can be removed.
3. Replace with a good bulb.
4. Reinstall tail/stoplight lens.

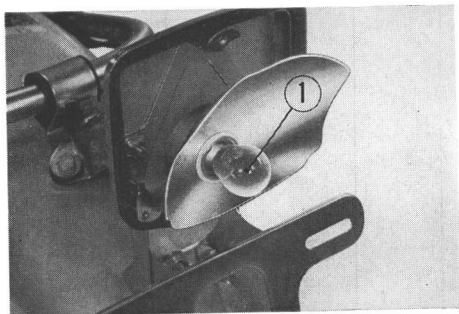

- ① Tail/stoplight bulb