


## Inspection

The reserve tank is behind the left shroud. Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (2), remove the protector (3) by removing the bolt (4), remove the reserve tank cap (5) and add coolant mixture until it reaches the UPPER level mark (6). Do not remove the radiator cap.

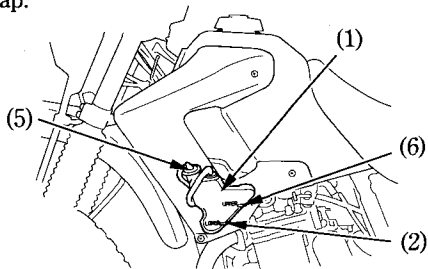

- |                      |                      |
|----------------------|----------------------|
| (1) Reserve tank     | (4) Bolt             |
| (2) LOWER level mark | (5) Reserve tank cap |
| (3) Protector        | (6) UPPER level mark |

## ⚠ WARNING

- \* Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.
- \* Keep hands and clothing away from the cooling fan, as it starts automatically.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

