

4. Install the filter with the rubber seal facing out, away from the engine. You will see "OUT-SIDE" on the filter body, near the seal.

**CAUTION:**

**\* Improper installation of the oil filter can cause serious engine damage.**

5. Reinstall the oil filter cover (2), making sure the bolts are tightened securely.


Oil Filter Bolt Torque:

12 N·m (1.2 kg-m , 9 lb-ft)

6. Perform steps 4 – 8 of Engine Oil Change.

Engine oil after draining and oil filter change:

1.32 ℓ (1.39 US qt , 1.16 Imp qt)

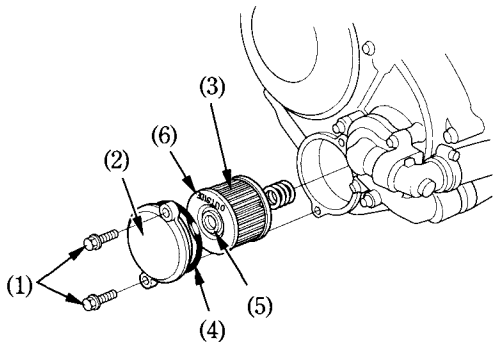

- (1) Oil filter bolts
- (2) Oil filter cover
- (3) Oil filter

- (4) O-ring
- (5) Rubber seal
- (6) OUT-SIDE mark