


Main fuse:

The main fuse (1) is located behind the right side cover.

The specified fuse is:

20A

1. Remove the right side cover (page 32).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse. The spare fuse (3) is located under the starter magnetic switch (4).
4. Reconnect the connector and install the left side cover.

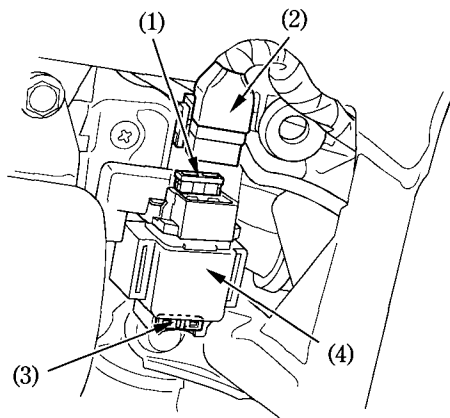

- (1) Main fuse
(2) Wire connector

- (3) Spare fuse
(4) Starter magnetic switch