



SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the left of the steering head. The engine serial number ② is located on top of the upper crankcase left side. These numbers are required when registering

the motorcycle. Refer to frame and engine serial numbers when ordering replacement parts to ensure that you will obtain the correct parts for your model series.

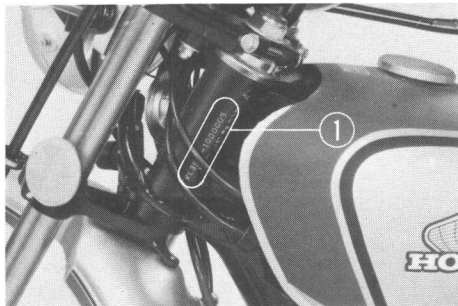

① Frame serial number

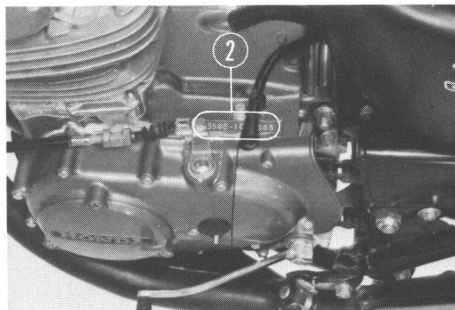

② Engine serial number