

and the engine operates. In the “OFF” position (either side of center) the ignition circuit is open and the engine will not operate.

This switch is intended primarily as a safety or emergency switch and normally remains in the “ON” position. The ignition will not operate unless the main switch is also in the “ON” position.

### Headlight Switch

The headlight switch ④ is located on the right handle bar grip switch housing. It can be operated without taking the hand off the handle bar grip. The red dot is the “OFF” position (headlight and taillight off). “L” is the low beam position (low beam light and taillight on). “H” is the high beam position (high beam light and taillight on).


The headlight will only come on when the engine is running.

### Document Compartment

The document compartment ① is located under the seat.

Put this owner’s manual and other documents in the vinyl sack and place them in the document compartment.

When washing your motorcycle, be careful not to direct a blast of water at the bottom of the seat.

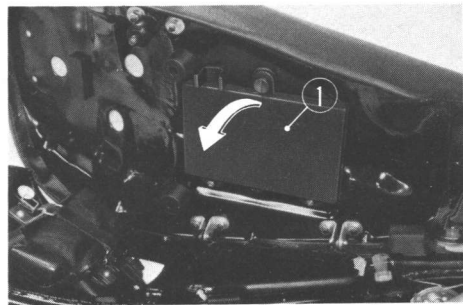

① Document compartment