


Oil Filter Maintenance

To clean the oil filler, proceed as follows :


1. Remove the oil filter cap ①.
2. Remove the spring ③ and oil filter screen ②, and wash them with solvent.
3. Reinstall the screen, spring, and cap as illustrated below.

NOTE : Unless the motorcycle is tilted more than 25 degrees to the left side, crankcase oil will drain through the oil filter opening when the cap is removed.

To avoid oil spillage, it is best to clean the oil filter after draining the crankcase, during periodic oil changes.

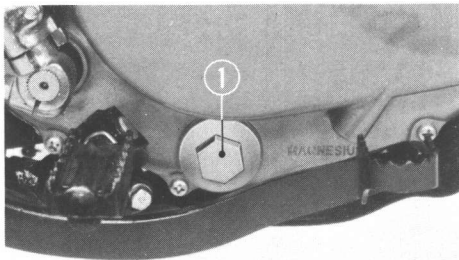

① Oil filter cap

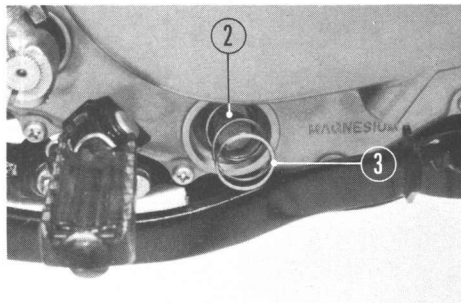

② Oil filter screen ③ Spring