


## Air Cleaner Maintenance

The air cleaner element must be cleaned and oiled at least once every 3000 miles. If your motorcycle is operated in dusty areas, more frequent servicing will be required. Your Honda dealer can help you to determine the correct service interval for your particular riding conditions.

1. Remove the air cleaner cover ①.
2. Remove the air cleaner element ③.

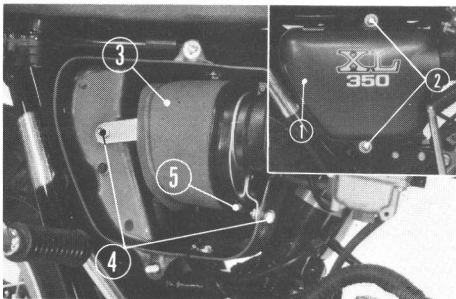

3. Wash the air cleaner element in clean stoddard solvent and allow to dry thoroughly.
4. Soak the air cleaner element in clean gear oil (#80~#90) until saturated, then squeeze out excess oil.
5. Reinstall the air cleaner element.
6. Reinstall the air cleaner cover. •

### WARNING :

- Gasoline or low flash point solvents are highly flammable and must not be used to clean the air cleaner element.
- Reconnect the pipes firmly when installing air cleaner.

- ① Air cleaner cover
- ② Air cleaner cover attaching nut
- ③ Air cleaner element
- ④ Air cleaner element attaching bolt
- ⑤ Air cleaner band screw