


## Spark Arrestor Maintenance

The exhaust system spark arrestor must be purged of accumulated carbon periodically (see Maintenance Schedule for servicing period).

1. Remove the two spark arrestor plug screws ①.
2. Remove the cover plate ② from the spark arrestor clean-out port.
3. Start the engine and rev several times while momentarily creating exhaust system back pressure by blocking the end of the exhaust pipe with a rag.
4. After clearing the spark arrestor of carbon reinstall the plug screws and clean-out port cover plate.

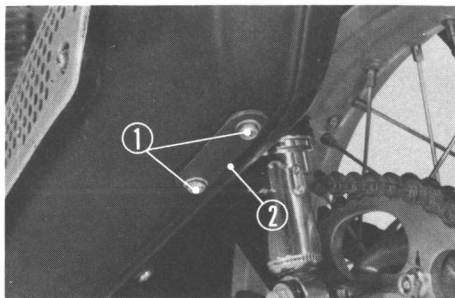

- ① Spark arrestor plus screws  
② Spark arrestor clean-out port cover plate