

3. If the drive chain is found to require adjustment, the procedure is as follows :


A. Remove the rear axle nut cotter pin ① and loosen the rear axle nut ②.

B. Loosen the lock nut ⑤ and turn the adjusting bolts ⑥ on both the right and left chain adjusters to increase or decrease chain tension. Align the chain adjuster index marks ③ to corresponding scale ④ graduations on both sides of the rear fork.

C. Tighten the rear axle nut and secure the nut with the cotter pin (replace the cotter pin if it has become broken or damaged). Tighten the lock nuts.

D. Recheck drive chain tension.

E. Rear brake pedal free travel is affected when repositioning the rear wheel. Check rear brake pedal free travel and adjust as necessary (page 55)

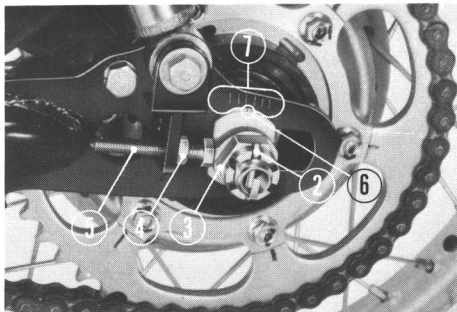

- ② Cotter pin
- ④ Lock nut
- ⑥ Index mark
- ⑧ Chain protector

- ③ Rear axle nut
- ⑤ Adjusting bolt
- ⑦ Reference marks

CAUTION: Check alignment of the chain protector ⑧. If the chain protector should become bent, it may rub against the drive chain and cause rapid wear.