

Maintenance Schedule

| Items | Frequency | Whichver Comes First ⇒ | Regular Maint. Interval | | | | | Refer to page: | | | |
|-------|-----------|---------------------------|-------------------------|-------|---|---|-------|----------------|-------|--------|----|
| | | | mi | 100 | 600 | 1,200 | 1,800 | | 2,400 | | |
| | | | km | 150 | 1,000 | 2,000 | 3,000 | | 4,000 | | |
| | | | Note | Month | 1 | 6 | 12 | | 18 | 24 | |
| | | Note 1 | | I, L | I, L: every 300 mi (500 km) or 3 months | | | | | 97 | |
| | | | | | I | I | I | I | I | 98 | |
| | | | | | I | I | I | I | I | 84 | |
| | | | | | I | I | I | I | I | 81 | |
| | | | | | I | I | I | I | I | 69 | |
| | | | | | | | I | | I | 96 | |
| | * | | | | | | I | | I | 78 | |
| | * | | | | | C: every 1,000 mi (1,600 km) or every 100 operating hours | | | | | 76 |
| | * | | | | I | | I | | I | — | |
| | ** | | | | I | I | I | I | I | 87, 92 | |
| | ** | | | | I | | I | | I | — | |

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 146).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.