

Quick Reference

Initial Maintenance	about 100 miles (150 km) or one month.
Regular Maintenance	about every 600 miles (1,000 km) or six months.
Pre-ride Inspection	Check the following items each time before you ride (page 25): tires, spokes & rims, leaks, engine oil, fuel, drive chain, cables, nuts & bolts, throttle, brakes, and clutch lever.
Fuel/Capacity	unleaded gasoline, pump octane number of 86 or higher tank: 1.48 US gal (5.6 ℓ , 1.23 Imp gal) reserve: 0.29 US gal (1.1 ℓ , 0.24 Imp gal)
Engine Oil	API Service Classification SF or SG; SAE 10W-40
Maximum Weight Capacity	220 lbs (100 kg) rider only (no passenger or cargo) and any accessories
Tires	Front: 2.50-19-4PR , Rear: 3.00-16-4PR
Tire Pressure (cold)	Front: 15 psi (100 kPa , 1.0 kgf/cm ²) Rear: 18 psi (125 kPa , 1.25 kgf/cm ²)
Spark Plug	CR7HSA (NGK) or U22FSR-U (DENSO)