

Maintenance Schedule

Item	Break-in Maint.	Regular Maint. Interval	Note:	Refer to page:
Drive Chain Slider	I	I		97
Brake Shoe Wear		I		83
Brake System	I	I		80
Clutch System	I	I		67
Side Stand		I		95
* Suspension		I		77
* Spark Arrester		C		76
* Nuts, Bolts, Fasteners	I	I		—
** Wheels/Tires	I	I		86, 91
** Steering Head Bearings	I	I		—

Break-in Maintenance: first week of operation, about 200 miles (350 km).

Regular Maintenance: every 30 riding days, about 1,000 miles (1,600 km).