
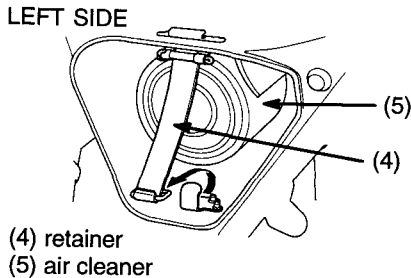


# Air Cleaner

## Cleaning

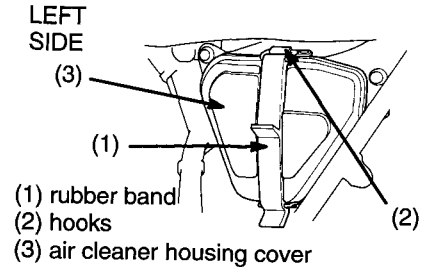

1. Remove the left side cover (page 53).
2. Remove the rubber band (1) from the hooks (2) and remove the air cleaner housing cover (3).
3. Unhook the retainer (4) and remove the air cleaner assembly (5).
4. Remove the air cleaner (foam) from the metal air cleaner body. Wipe the body clean.
5. Gently wash the air cleaner in clean, non-flammable (high flash point) solvent such as kerosene — not gasoline. After cleaning, gently squeeze out the remaining solvent. Avoid twisting or wringing the air cleaner. This can tear the foam.