


# Clutch System

Refer to *Safety Precautions* on page 43.

## Clutch Freeplay

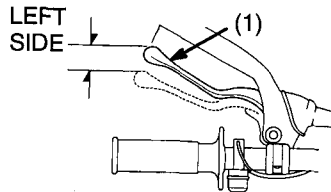

(1) clutch lever

## Inspection


Check freeplay.

Freeplay: 10–20 mm (3/8 - 3/4 in)

If necessary, adjust to the specified range.

## Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

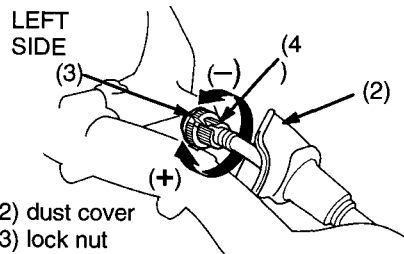

- (2) dust cover
- (3) lock nut
- (4) upper clutch cable adjuster
- (+) increase freeplay
- (-) decrease freeplay

1. Pull the rubber dust cover (2) back.
2. Loosen the lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.