


# Clutch System

4. Tighten the lock nut and check the freeplay again.

## Lower Adjustment

The lower clutch cable adjuster is used if the upper clutch cable adjuster is threaded out near its limit — or the correct freeplay cannot be obtained.

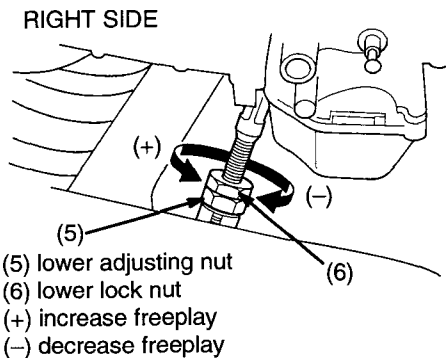

1. Loosen the lock nut (3) and turn the upper clutch cable adjuster (4) all the way in (to provide maximum freeplay).
2. Tighten the lock nut and pull the dust cover (2) back to its normal position.
3. Hold the adjusting nut (5) and loosen the lower lock nut (6) at the lower end of the cable.
4. Turn the lower adjusting nut to obtain the specified freeplay.
5. Hold the adjusting nut and tighten the lower lock nut. Check the adjustment.